

Order no.:	
-----	

<input type="checkbox"/> Provide estimate only	<input type="checkbox"/> Order
<input type="checkbox"/> Attachment for custom fabrication enclosed	
Billing address/customer number	
Delivery address	
Sales person	Name
	.....
	Date                      Signature

## C2000 (E 101)

Max. load capacity: 160 kg/353 lbs  
(standard equipment)

- Front-wheel drive ET07
- Rear-wheel drive ET08

## C2000-S (E 102)

Max. load capacity: 160 kg/353 lbs  
(standard equipment)

- Front-wheel drive ET07
- Rear-wheel drive ET08

## C2000-H (E 103)

Max. load capacity: 130 kg/287 lbs  
(standard equipment)

- Front-wheel drive ET07
- Rear-wheel drive ET08

**Artikel-Nummer: 490E62=00000\_K**



Sample equipment

### Standard Equipment


- 6 km/h
- 94 Ah gel batteries (C5)
- enAble 50 impulse control
- Battery charger
- 14" caster wheels
- Lighting
- Suspension on all wheels
- Standard seat
- Seat cushion
- Armrests
- Individual centre footrests
- Splash guard on all wheels
- Luggage carrier
- Lap belt with buckle
- For C2000-H: includes electric seat height adjustment, max load capacity of 130 kg/287 lbs

**The number codes contained in this order form are not intended to be used as article numbers for spare parts orders. Please use the spare parts catalogue for spare parts orders.**

## Basic data (voluntary information)

Gender \_\_\_\_\_ Indication \_\_\_\_\_

Age \_\_\_\_\_ Paying party \_\_\_\_\_

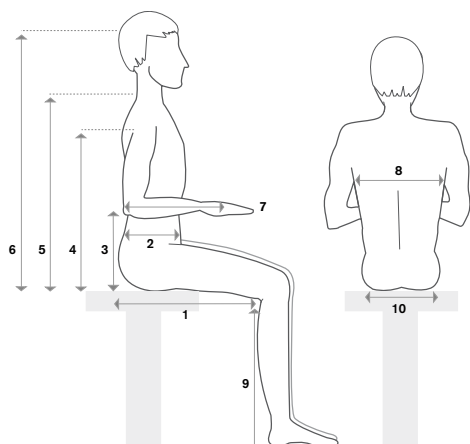

## Mandatory information\*

Body height in cm \_\_\_\_\_

Body weight in kg \_\_\_\_\_

1 Seat depth \_\_\_\_\_

2 Trunk depth \_\_\_\_\_

3 Armrest height \_\_\_\_\_

4 Armpit height \_\_\_\_\_

5 Shoulder height \_\_\_\_\_

6 Head height \_\_\_\_\_

7 Forearm length to the middle of the palm \_\_\_\_\_

8 Trunk width \_\_\_\_\_

9 Lower leg length \_\_\_\_\_

10 Seat width \_\_\_\_\_

\* This information will help to support user-oriented settings and product development. Ottobock guarantees the confidential and purely internal use of these data.

Chassis options		
EA 13	<input type="checkbox"/>	Chassis up to 160 kg/353 lbs (standard equipment) -
EA 16	<input type="checkbox"/>	Chassis up to 200 kg/441 lbs <b>Add. charge</b>

Chassis accessories		
ES 03	<input type="checkbox"/>	Rear marker plate (required in Germany for road traffic permit) <b>Add. charge</b>

Seat height adjustment		
EC 55	<input type="checkbox"/>	Electric seat height adjustment (up to 40 cm, seat inclination 0°) <b>max. load capacity 130 kg/287 lbs!</b> (standard equipment on C2000-H) <b>Add. charge</b>
EC 60	<input type="checkbox"/>	Electric seat height adjustment "Heavy Duty" (up to 30 cm, seat inclination 0°) <b>max. load capacity 200 kg/441 lbs!</b> <b>Add. charge</b>

Back adjustments		
ED 50	<input type="checkbox"/>	Electric back angle adjustment 30° (not available with Recaro n-Joy and Recaro n-Joy-Plus) <b>Add. charge</b> (not available in combination with contour seat, small, SD 36 and 38 cm or contour seat, large, SD 40 and 42 cm)

Standard seat		
EC 01	<input type="checkbox"/>	Standard seat, small (SD 38 ... 46 cm, SW 38 ... 42 cm) -
EC 02	<input type="checkbox"/>	Standard seat, large (SD 42 ... 50 cm, SW 43 ... 48 cm) -

Seat options for load capacities between 200 kg and 260 kg (441 lbs – 573 lbs) available through custom fabrication upon request.

Settings for the standard seat

Back angle  -9/1/11/21°  0/10/20/30°

Not available with electric back angle adjustment!

Seat inclination SI  0°  3°  6°

3° and 6° seat inclination not available with electric seat tilt and seat height adjustment!

Seat depth SD in cm  38  40  42  44  46  48  50

Seat width SW ..... cm

Lower leg length LL ..... cm (25 ... 54 cm) **without seat cushion**

Seat high SH in cm **47** (front-wheel-drive) **53** (rear-wheel-drive)

Note: for 3° seat inclination, without seat cushion, dependent on lower leg length, not for electric seat height adjustment; seat height less lower leg length equals ground clearance, a minimum of 8 cm is recommended, ground clearance with centre footrest => 8 cm

<b>Contour seat</b>							
<b>EC 03</b>	<input type="checkbox"/>	<b>Contour seat, small</b> (SD 36 ... 44 cm, SW 38 ... 42 cm)	<b>Add. charge</b>				
<b>EC 04</b>	<input type="checkbox"/>	<b>Contour seat, large</b> (SD 40 ... 48 cm, SW 43 ... 48 cm)	<b>Add. charge</b>				
Settings for the contour seat							
<b>Seat depth SD in cm</b>	<input type="checkbox"/> 36	<input type="checkbox"/> 38	<input type="checkbox"/> 40	<input type="checkbox"/> 42	<input type="checkbox"/> 44	<input type="checkbox"/> 46	<input type="checkbox"/> 48
<b>Seat width SW</b>	..... cm						
(for 0° seat inclination, with seat cushion, dependent on lower leg length, not for electric seat height adjustment, ground clearance = SH – LL; 8 cm is recommended, ground clearance with centre footrest => 8 cm)							

<b>Recaro seat</b>			
<b>EC 40</b>	<input type="checkbox"/>	<b>Recaro n-Joy</b> (manually adjustable backrest)	<b>Add. charge</b>
<b>EC 41</b>	<input type="checkbox"/>	<b>Recaro n-Joy-Plus</b> (adaptable on site, manually adjustable backrest, seat depth SD 38 ... 56 cm)	<b>Add. charge</b>

<b>Modular Recaro seating system</b>					
<b>EC 42</b>	<input type="checkbox"/>	<b>Backrest LX</b> (manually adjustable)	<b>Add. charge</b>		
<b>EC 43</b>	<input type="checkbox"/>	<b>Backrest LT</b> (lateral supports with different setting possibilities, manually adjustable)	<b>Add. charge</b>		
<b>EC 44</b>	<input type="checkbox"/>	<b>Seat bottom F</b> (flat padded, seat bottom sewn to lateral guides)	<b>Add. charge</b>		
<b>EC 45</b>	<input type="checkbox"/>	<b>Seat bottom X</b> (contoured lateral guides with seat extension)	<b>Add. charge</b>		
<b>EC 46</b>	<input type="checkbox"/>	<b>Seat bottom W</b> (flat padded, with seat extension)	<b>Add. charge</b>		
Settings for Recaro seat/modular Recaro seating system					
<b>Seat depth SD in cm</b>	<input type="checkbox"/> 38	<input type="checkbox"/> 40	<input type="checkbox"/> 42	<input type="checkbox"/> 44	<input type="checkbox"/> 46
(only for Recaro n-Joy Plus)	<input type="checkbox"/> 48	<input type="checkbox"/> 50	<input type="checkbox"/> 52	<input type="checkbox"/> 54	<input type="checkbox"/> 56
<b>Lower leg length LL</b>	..... cm (28 ... 54 cm, in 1 cm increments)				
Note: for 0° seat inclination, with seat cushion, dependent on lower leg length, not for electric seat height adjustment; seat height less lower leg length equals ground clearance, 8 cm is recommended, ground clearance with centre footrest => 8 cm					
All Recaro seats include headrest and back bag.					

<b>Seat cushion</b> (only for standard seat)			
<b>EC 06</b>	<input type="checkbox"/>	<b>Seat cushion, black cover</b> (standard equipment)	–
<b>EC 10</b>	<input type="checkbox"/>	<b>Seat cushion with incontinence cover</b>	<b>Add. charge</b>
<b>EC 07</b>	<input type="checkbox"/>	<b>Without seat cushion</b>	<b>Price reduction</b>
<b>EC 11</b>	<input type="checkbox"/>	<b>Terra seat cushion</b> (up to 140 kg/309 lbs)	<b>Add. charge</b>
<b>EC 12</b>	<input type="checkbox"/>	<b>Terra Aquos seat cushion</b> (up to 140 kg/309 lbs)	<b>Add. charge</b>
<b>EC 13</b>	<input type="checkbox"/>	<b>Aerius seat cushion</b> (up to 140 kg/309 lbs)	<b>Add. charge</b>
<b>EC 14</b>	<input type="checkbox"/>	<b>Aerius Active seat cushion</b> (up to 150 kg/330 lbs)	<b>Add. charge</b>
<b>EC 17</b>	<input type="checkbox"/>	<b>Terra Flair seat cushion</b> (up to 150 kg/330 lbs)	<b>Add. charge</b>
Please refer to our seat cushion brochure for information on additional seat cushions.			

<b>Seat tilt</b>			
<b>EC 50</b>	<input type="checkbox"/>	<b>Electric seat tilt 30° with centre of gravity shifting</b> (seat inclination 0°) <b>max. load capacity 200 kg/441 lbs!</b>	<b>Add. charge</b>
<b>EC 54</b>	<input type="checkbox"/>	<b>Electric seat tilt 45° with centre of gravity shifting</b> (seat inclination 0°)	<b>Add. charge</b>

<b>Back version</b> (only for standard seat)			
<b>ED 01</b>	<input type="checkbox"/>	<b>Back upholstery</b> (standard equipment)	–
<b>ED 02</b>	<input type="checkbox"/>	<b>Without back upholstery</b>	<b>Price reduction</b>
Please use our accessories catalogue for the selection of individual back systems!			


## Information



EU 40 Calibratable joystick



EU 23 – 28 Joystick options

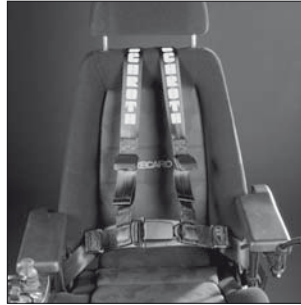

EP 51 Four-way chest strap

C2000 – Seat height matrix (in cm)						
		Standard seat (without cushion)	Contour seat	Recaro seat		
				Seat bottom W	Seat bottom F	Seat bottom X (n-Joy)
<b>Front-wheel drive</b>	<b>Seat frame (*)</b>	47	57	58	57	60
	Electric seat tilt	51	61	63	62	65
	Lift and tilt unit	58	68	70	69	72
<b>Rear-wheel drive</b>	<b>Seat frame (*)</b>	53	63	66	65	68
	Electric seat tilt	53	63	65	64	67
	Lift and tilt unit	58	68	70	69	72

(\*) 3° seat inclination not available  
Manufacturing tolerance +/- 1 cm

Belts		
EP 51	<input type="checkbox"/>	<b>Static four-way chest strap kit</b> (only for Recaro seat/seating system) (Not available in combination with seat tilt and seat height adjustment) <b>Add. charge</b>
EP 60	<input type="checkbox"/>	<b>Chest belt with hook-and-loop closure, installed at chest height</b> (only for Recaro seat/seating system) <b>Add. charge</b>
EP 65	<input type="checkbox"/>	<b>Lap belt with buckle</b> (standard equipment) <b>-</b>

Lap belt or four-way chest strap required in Germany for road traffic permit!

Seating system accessories		
EE 30	<input type="checkbox"/>	<b>Adapter for headrest installation kit</b> (only for Standard and Contour seat) <b>Add. charge</b>

Please refer to our accessories catalogue for information about headrests.

Footrests		
EB 02	<input type="checkbox"/>	<b>Individual footrests, with aluminium footplates</b> , max. load capacity 140 kg/309 lbs! (continuously angle-adjustable) Only available with front-wheel drive and standard/contour seat, small, Recaro seat <b>Add. charge</b>
EB 03	<input type="checkbox"/>	<b>Single-panel footrest with aluminium footplate</b> (continuously angle-adjustable) only available with front-wheel drive and standard/contour seat, small, Recaro seat <b>Add. charge</b>
EB 62	<input type="checkbox"/>	<b>Centre footrest, individual footplates</b> (each approx. 18 cm), angle-adjustable footplate (standard equipment) max. load capacity 200 kg/441 lbs! <b>-</b>
EB 61	<input type="checkbox"/>	<b>Centre footrest, continuous footplate</b> , angle-adjustable footplate, max. load capacity 200 kg/441 lbs! <b>-</b>

Footrest accessories		
EB 70	<input type="checkbox"/>	<b>Fixation straps for footplates</b> (included with mounting accessories) <b>Add. charge</b>

Armrest		
EE 10	<input type="checkbox"/>	<b>Armrest with clothing protector</b> (standard equipment, only for standard and contour seats) <b>-</b>
EE 33	<input type="checkbox"/>	<b>Extended armrest with cut-out</b> (telescoping, only included with Recaro n-joy/njoy+) <b>-</b>
EE 40	<input type="checkbox"/>	<b>Extended armrest with clothing protector</b> (telescoping, with cut-out for back tube, only for Standard and Contour seat) <b>Add. charge</b>

Armrest accessories		
EE 34	<input type="checkbox"/>	<b>Channel forearm pad adapter, fixed, mounting side left</b> <b>Add. charge</b>
EE 24	<input type="checkbox"/>	<b>Channel forearm pad adapter, fixed, mounting side right</b> <b>Add. charge</b>
EE 35	<input type="checkbox"/>	<b>Channel forearm pad adapter, swivelling, mounting side left</b> <b>Add. charge</b>
EE 25	<input type="checkbox"/>	<b>Channel forearm pad adapter, swivelling, mounting side right</b> <b>Add. charge</b>
EE 36	<input type="checkbox"/>	<b>Arm strap, mounting side left</b> <b>Add. charge</b>
EE 26	<input type="checkbox"/>	<b>Arm strap, mounting side right</b> <b>Add. charge</b>

For information on channel forearm pads and hand pads, please refer to our accessories catalogue!

Colour of steering links		
012	<input type="checkbox"/>	<b>Sky blue</b> (standard equipment) <b>-</b>
025	<input type="checkbox"/>	<b>Stainless steel silver</b> (standard equipment) <b>-</b>
038	<input type="checkbox"/>	<b>Sparkle red</b> (standard equipment) <b>-</b>
005	<input type="checkbox"/>	<b>Sparkle light orange</b> (standard equipment) <b>-</b>
003	<input type="checkbox"/>	<b>Jet black RAL 9005</b> (standard equipment) <b>-</b>
020	<input type="checkbox"/>	<b>Saturn blue metallic</b> <b>Add. charge</b>
016	<input type="checkbox"/>	<b>Silver metallic</b> <b>Add. charge</b>
021	<input type="checkbox"/>	<b>Sparkle granny-smith</b> <b>Add. charge</b>
004	<input type="checkbox"/>	<b>Ice blue</b> <b>Add. charge</b>
001	<input type="checkbox"/>	<b>Brilliant silver</b> <b>Add. charge</b>
018	<input type="checkbox"/>	<b>Signal red RAL 3001</b> <b>Add. charge</b>
002	<input type="checkbox"/>	<b>Anthracite metallic</b> <b>Add. charge</b>

027	<input type="checkbox"/>	Shimano matte	Add. charge
009	<input type="checkbox"/>	Vinho sparkle	Add. charge
017	<input type="checkbox"/>	Traffic yellow RAL 1023	Add. charge
015	<input type="checkbox"/>	Clear reptile glossy	Add. charge
013	<input type="checkbox"/>	Jet black RAL 9005 matte	Add. charge
019	<input type="checkbox"/>	White pearl	Add. charge
028	<input type="checkbox"/>	Rainbow	Add. charge

<b>Tyre colour</b>			
EG 03	<input type="checkbox"/>	Grey	-
EG 04	<input type="checkbox"/>	Black (only with lugs)	-

<b>Tread pattern</b>			
EG 02	<input type="checkbox"/>	Lugs	-
EG 50	<input type="checkbox"/>	Caster wheels with ribs, drive wheels with lugs (not available with black tyres)	-

<b>Tyres</b>			
EG 55	<input type="checkbox"/>	Pneumatic tyres (standard equipment)	-
EG 60	<input type="checkbox"/>	Puncture-proof tyres on all wheels (PU caster wheels, drive wheels with puncture repair kit)	Add. charge

<b>Drive unit</b>			
ET 01	<input type="checkbox"/>	6 km/h drive unit (standard equipment)	-
ET 02	<input type="checkbox"/>	10 km/h drive unit (road traffic permit included, lap belt or four-way chest strap and rear marker plate required)	Add. charge

<b>Batteries</b>			
EU 03	<input type="checkbox"/>	Without	Price reduction
EU 01	<input type="checkbox"/>	Two 94 Ah (C5) gel batteries	-

<b>Battery charger</b>			
EU 91	<input type="checkbox"/>	Battery charger (standard equipment)	-

<b>Control unit/control panel</b>			
EU 85	<input type="checkbox"/>	Standard control panel (standard equipment)	-
EU 86	<input type="checkbox"/>	Control panel with two external buttons Please indicate: <input type="checkbox"/> Piko button (diameter 50 mm, red/black) <input type="checkbox"/> Piko button (diameter 30 mm, red/black)	Add. charge
EU 87	<input type="checkbox"/>	Mid-tray control (MTC) electrically swivelling (charging/programming box required) Please indicate button type! <input type="checkbox"/> Piko button (diameter 50 mm, red/black) <input type="checkbox"/> Piko button (diameter 30 mm, red/black)	Add. charge

<b>Control panel holder</b>			
EU 19	<input type="checkbox"/>	Standard control panel holder (standard equipment)	-
EU 20	<input type="checkbox"/>	Control panel holder, swing-away in parallel	Add. charge
EU 29	<input type="checkbox"/>	Control panel holder, downwards adjustable	Add. charge
EU 18	<input type="checkbox"/>	Control panel holder, swing-away, height-adjustable	Add. charge

<b>Control panel holder mounting side (not for mid-tray control)</b>			
	<input type="checkbox"/>	Right	
	<input type="checkbox"/>	Left	

Tray-side mounting materials for mid-tray control (MTC)		
	<input type="checkbox"/>	Without -
EU 871	<input type="checkbox"/>	Tray with holder Add. charge
EU 873	<input type="checkbox"/>	Holder only Add. charge

External buttons for mid-tray control (MTC)		
	<input type="checkbox"/>	Without
EU 874	<input type="checkbox"/>	Piko button, diameter 30 mm, red Add. charge
EU 875	<input type="checkbox"/>	Piko button, diameter 30 mm, yellow Add. charge
EU 876	<input type="checkbox"/>	Piko button, diameter 30 mm, black Add. charge
EU 877	<input type="checkbox"/>	Piko button, diameter 50 mm, red Add. charge
EU 878	<input type="checkbox"/>	Piko button, diameter 50 mm, yellow Add. charge
EU 879	<input type="checkbox"/>	Piko button, diameter 50 mm, black Add. charge

One button, "swivel", required; connection of max. 3 buttons, "swivel", "ON/OFF" and "mode" possible.

Charging/programming box for mid-tray control (MTC) (includes 1.5 m BUS cable)		
EU 56	<input type="checkbox"/>	Yes Add. charge

Special controls		
EU 07	<input type="checkbox"/>	Push-button module (control of max. 10 electric options without LCD) Add. charge
EU 98	<input type="checkbox"/>	Programmable LCD, IR environment control and LED control included Add. charge
EU 97	<input type="checkbox"/>	Programmable LCD, IR environment control, Bluetooth and LED control included Add. charge

The following special controls require an LCD:

EU 09	<input type="checkbox"/>	<b>Chin control with mini joystick, electrically swing-away</b> Add. charge (standard control panel included) Please indicate: <input type="checkbox"/> Soft ball with elastomer <input type="checkbox"/> Soft ball with spring, hard <input type="checkbox"/> Soft ball with spring, soft Please indicate installation version: <input type="checkbox"/> Chin swivel arm, left <input type="checkbox"/> Chin swivel arm, right <input type="checkbox"/> Chin swivel arm overhead, mounting side left (multifunction switch MFS right) <input type="checkbox"/> Chin swivel arm overhead, mounting side right (multifunction switch MFS left)
	<input type="checkbox"/>	<b>Chin control with midi joystick, electrically swing-away</b> Add. charge (standard control panel included) Please indicate installation version: <input type="checkbox"/> Chin swivel arm, left <input type="checkbox"/> Chin swivel arm, right <input type="checkbox"/> Chin swivel arm overhead, mounting side left (multifunction switch MFS right) <input type="checkbox"/> Chin swivel arm overhead, mounting side right (multifunction switch MFS left)
EU 10	<input type="checkbox"/>	<b>Foot control, right</b> (standard control panel included) <input type="checkbox"/> right <input type="checkbox"/> left Add. charge
EU 11	<input type="checkbox"/>	<b>Sip and puff control</b> (only available in combination with 6 km/h drive unit and Recaro seat/seating system, standard control panel included) Add. charge
EU 40	<input type="checkbox"/>	<b>Calibratable joystick, standard, includes multifunction button</b> (standard control panel included) Add. charge Please indicate: <input type="checkbox"/> Control knob with elastomer <input type="checkbox"/> Soft ball with elastomer <input type="checkbox"/> Soft ball with spring, hard <input type="checkbox"/> Soft ball with spring, soft

<b>EU 45</b>	<input type="checkbox"/>	<b>Calibratable joystick, includes multifunction button, for assembly in tray</b> (includes holder for LCD with gooseneck for attachment in the tray and standard control panel) Joystick top version: Please indicate. <input type="checkbox"/> <b>Control knob with elastomer</b> <input type="checkbox"/> <b>Soft ball with elastomer</b> <input type="checkbox"/> <b>Soft ball with spring, hard</b> <input type="checkbox"/> <b>Soft ball with spring, soft</b>	<b>Add. charge</b>
<b>EU 61</b>	<input type="checkbox"/>	<b>IR remote control hands-free telephone including mains adapter</b>	<b>Add. charge</b>
<b>EU 68</b>	<input type="checkbox"/>	<b>Adapter for 1 – 6 buttons</b> (required for 1 – 6 button control; select buttons under U 691 to 704)	<b>Add. charge</b>
<b>EU 69</b>	<input type="checkbox"/>	<b>Easywave wireless module</b>	<b>Add. charge</b>
<b>EU 63</b>	<input type="checkbox"/>	<b>“Dragger 32” mouse click input assistance</b>	<b>Add. charge</b>
<b>EU 59</b>	<input type="checkbox"/>	<b>Adapter cable for left/right mouse click</b> Please indicate: <input type="checkbox"/> <b>Piko button</b> (diameter 50 mm, red/black) <input type="checkbox"/> <b>Piko button</b> (diameter 30 mm, red/black)	<b>Add. charge</b>

**Special control accessories**

<b>EU 67</b>	<input type="checkbox"/>	<b>ON/OFF or EMERGENCY STOP with gooseneck for LCD</b> (select button under EU 691 to EU 704)	<b>Add. charge</b>
<b>EU 75</b>	<input type="checkbox"/>	<b>ON/OFF button for LCD module including MFS adapter cable</b> (select buttons under EU 691 to EU 704)	<b>Add. charge</b>

ON/OFF or EMERGENCY STOP with gooseneck or ON/OFF button for LED control required.

**Piko button** (diameter 50 mm)

<b>EU 69 1</b>	<input type="checkbox"/>	<b>Red</b>	<b>Add. charge</b>
<b>EU 69 2</b>	<input type="checkbox"/>	<b>Yellow</b>	<b>Add. charge</b>
<b>EU 69 3</b>	<input type="checkbox"/>	<b>Black</b>	<b>Add. charge</b>
<b>EU 69 7</b>	<input type="checkbox"/>	<b>Silver</b>	<b>Add. charge</b>

**Piko button** (diameter 30 mm)

<b>EU 70 1</b>	<input type="checkbox"/>	<b>Red</b>	<b>Add. charge</b>
<b>EU 70 2</b>	<input type="checkbox"/>	<b>Yellow</b>	<b>Add. charge</b>
<b>EU 70 3</b>	<input type="checkbox"/>	<b>Black</b>	<b>Add. charge</b>
<b>EU 70 4</b>	<input type="checkbox"/>	<b>Silver</b>	<b>Add. charge</b>

**Activation of the drive-away lock**

	<input type="checkbox"/>	<b>Yes</b>
	<input type="checkbox"/>	<b>No</b>

**Activation of the electronic steering lock**

	<input type="checkbox"/>	<b>Yes</b>
	<input type="checkbox"/>	<b>No</b>

**LCD holder**

<b>EU 31</b>	<input type="checkbox"/>	<b>Standard LCD holder</b> (standard equipment for LCD)	<b>-</b>
<b>EU 30</b>	<input type="checkbox"/>	<b>LCD holder, swing-away, height- and angle-adjustable</b>	<b>Add. charge</b>
<b>EU 32</b>	<input type="checkbox"/>	<b>LCD holder with gooseneck</b>	<b>Add. charge</b>
<b>EU 34</b>	<input type="checkbox"/>	<b>LCD holder with gooseneck for tray</b> (included)	<b>Add. charge</b>

**Control unit accessories**

<b>EU 15</b>	<input type="checkbox"/>	<b>Attendant control</b>	<b>Add. charge</b>
<b>EU 22</b>	<input type="checkbox"/>	<b>Protective bow for standard control panel</b>	<b>Add. charge</b>
<b>EU 23</b>	<input type="checkbox"/>	<b>Fork for tetraplegics, horizontal</b> (adjustable for hand width 70 ... 90 mm)	<b>Add. charge</b>
<b>EU 24</b>	<input type="checkbox"/>	<b>Stick S80</b> (special joystick handle 80 mm)	<b>Add. charge</b>
<b>EU 25</b>	<input type="checkbox"/>	<b>Soft ball</b> (black cover)	<b>Add. charge</b>



<b>EU 26</b>	<input type="checkbox"/>	<b>Ball top, small</b> (diameter 43 mm)	<b>Add. charge</b>
<b>EU 27</b>	<input type="checkbox"/>	<b>Ball top, large</b> (diameter 48 mm)	<b>Add. charge</b>
<b>EU 28</b>	<input type="checkbox"/>	<b>Joystick top, flexible, including ball top, large</b>	<b>Add. charge</b>
(Extension by 60 mm; control panel holder, downwards adjustable or swing-away, is recommended)			
<b>EU 35</b>	<input type="checkbox"/>	<b>Soft ball, coloured</b> (diameter 30 mm, 4 pieces)	<b>Add. charge</b>
<b>EU 50</b>	<input type="checkbox"/>	<b>Handheld programming device</b> (dealer version, not subject to discount)	<b>Add. charge</b>
<b>EU 55</b>	<input type="checkbox"/>	<b>Programming software with USB adapter</b> (not subject to discount, certificate required)	<b>Add. charge</b>
<b>EU 681</b>	<input type="checkbox"/>	<b>2-fold adapter cable with Buddy button</b> (black) (free assignment of 2 electrical functions) Please indicate function: <input type="checkbox"/> <b>Footrest, left</b> <input type="checkbox"/> <b>Footrest, right</b> <input type="checkbox"/> <b>Seat tilt</b> <input type="checkbox"/> <b>Back angle adjustment</b> <input type="checkbox"/> <b>Seat height adjustment</b> <input type="checkbox"/> <b>Light</b> <input type="checkbox"/> <b>Warning flasher</b> <input type="checkbox"/> <b>Direction indicator, left</b> <input type="checkbox"/> <b>Direction indicator, right</b> <input type="checkbox"/> <b>Horn</b>	<b>Add. charge</b>
<b>EU 682</b>	<input type="checkbox"/>	<b>2-fold adapter cable with Piko button</b> (black) (free assignment of 2 electrical functions) Please indicate function: <input type="checkbox"/> <b>Footrest, left</b> <input type="checkbox"/> <b>Footrest, right</b> <input type="checkbox"/> <b>Seat tilt</b> <input type="checkbox"/> <b>Back angle adjustment</b> <input type="checkbox"/> <b>Seat height adjustment</b> <input type="checkbox"/> <b>Light</b> <input type="checkbox"/> <b>Warning flasher</b> <input type="checkbox"/> <b>Direction indicator, left</b> <input type="checkbox"/> <b>Direction indicator, right</b> <input type="checkbox"/> <b>Horn</b>	<b>Add. charge</b>

**General accessories**

<b>ES 22</b>	<input type="checkbox"/>	<b>Accessory pouch</b> (e.g. for battery charger, tool kit)	<b>Add. charge</b>
<b>ES 24</b>	<input type="checkbox"/>	<b>Pocket for mobile phone</b>	<b>Add. charge</b>
<b>ES 32</b>	<input type="checkbox"/>	<b>Cover cap for standard seating units</b>	<b>Add. charge</b>
<b>ES 35</b>	<input type="checkbox"/>	<b>Tray, swing-away to the side</b> (incl. mounting accessories; cut-out for control panel must be adapted)	<b>Add. charge</b>
<b>EZ 80</b>	<input type="checkbox"/>	<b>Airman pumpk</b>	<b>Add. charge</b>
<b>EA 60</b>	<input type="checkbox"/>	<b>Crutch holder</b>	<b>Add. charge</b>
<b>ES 38</b>	<input type="checkbox"/>	<b>Folding rearview mirror, mounting side left</b>	<b>Add. charge</b>
<b>ES 28</b>	<input type="checkbox"/>	<b>Folding rearview mirror, mounting side right</b> (cannot be installed on control panel side in combination with holder, swing-away in parallel and tray)	<b>Add. charge</b>
<b>EZ 52</b>	<input type="checkbox"/>	<b>Tool kit</b>	<b>Add. charge</b>

**Special options**

<b>20465.011</b>	<input type="checkbox"/>	<b>Contour back with standard seat bottom or contour seat bottom with standard back</b>	<b>Add. charge</b>
<b>22298.007</b>	<input type="checkbox"/>	<b>Removable enAble control panel for attendant, angle-adjustable</b>	<b>Add. charge</b>
<b>49058.001</b>	<input type="checkbox"/>	<b>Stand-alone joystick, replaces control panel</b>	<b>Add. charge</b>
<b>19893.001</b>	<input type="checkbox"/>	<b>e-series wireless stop</b>	<b>Add. charge</b>
<b>23279.000</b>	<input type="checkbox"/>	<b>Mid-tray control according to drawing</b>	<b>Add. charge</b>
<b>23279.001</b>	<input type="checkbox"/>	<b>Mid-tray control for electrically swing-away control panel</b>	<b>Add. charge</b>